


Step #2

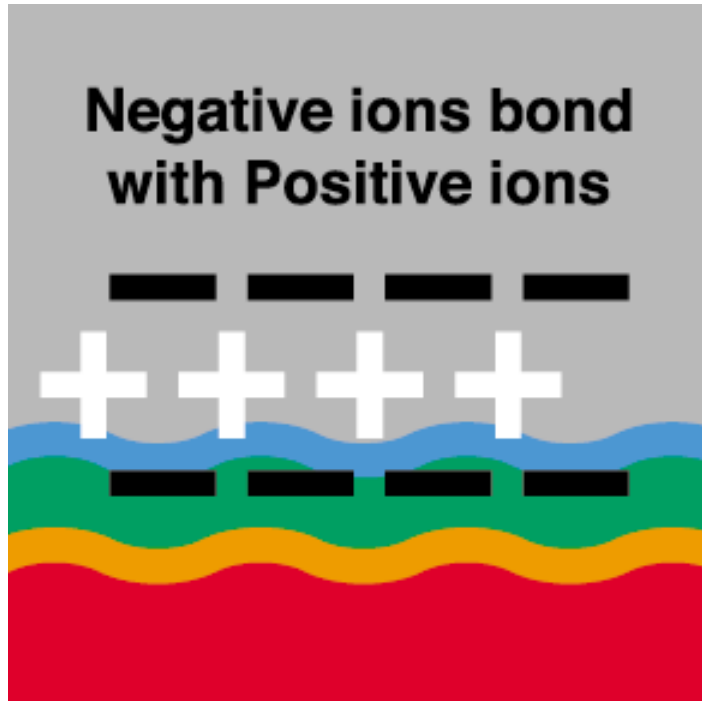

Apply the Negatively
Charged Sealant to
the Surface.